




STEP 1
4" PIECE OF 2 MIL SMOOTH FOIL TAPE FOLDED IN HALF AND CENTERED OVER DUCT TO EQUIPMENT HANDLER JOINT

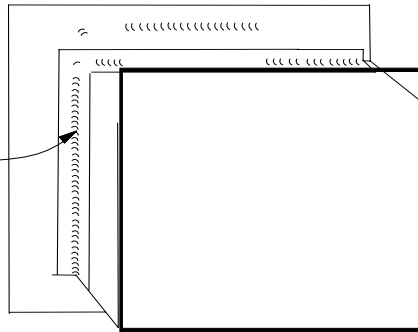

STEP 2
ALUMAGUARD APPLIED TO DUCT/ OR APPROPRIATE DUCT INSULATION AND OVER 2 MIL SMOOTH FOIL TAPE ONTO EQUIPMENT HANDLER A MINIMUM OF 4"

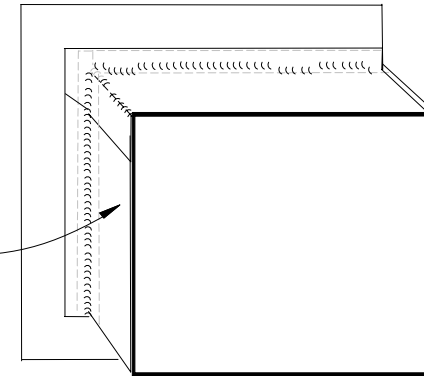


STEP 3
APPLY A 12" STRIP OF ALUMAGUARD 6" ON VERTICAL DUCT AND 6" ON HORIZONTAL EQUIPMENT - CUT END OF ALUMAGUARD IN HALF FORM TO FIT CORNER BY APPLYING 6" TO DUCT AND 6" TO EQUIPMENT HANDLER

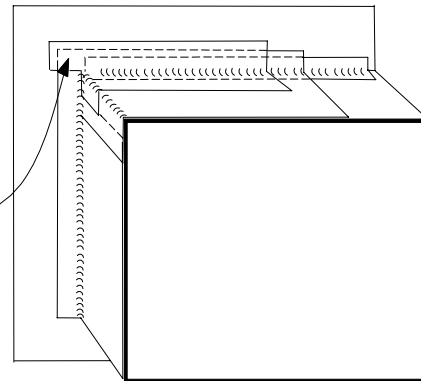

STEP 4
A 12" STRIP OF ALUMAGUARD 6" ON VERTICAL DUCT AND 6" ON HORIZONTAL EQUIPMENT - CUT END OF ALUMAGUARD IN HALF FORM TO FIT CORNER BY APPLYING 6" TO DUCT AND 6" TO EQUIPMENT HANDLE

APPLY A 4" PIECE OF 2 MIL SMOOTH FOIL OVER ALL EXPOSED ASPHALT EDGES AS A WATER SHED

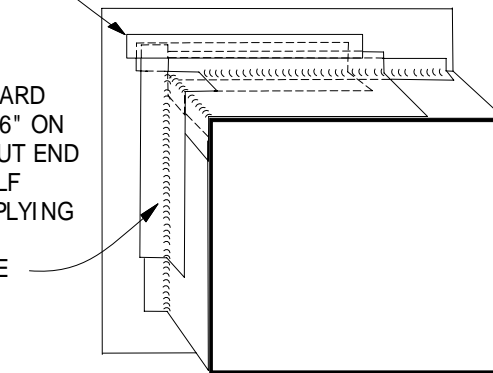

FOLLOW ALL STEPS COMPLETELY AROUND THE DUCT FOR CORRECT APPLICATION

SECTION @ ALUMAGUARD SEALING TO EQUIPMENT DETAIL

POLYGUARD PRODUCTS, INC. 2011

(NOT TO SCALE)