




INSULATION END

INSULATION END COVERED WITH 1- 1/4" STRIPS OF VAPORGUARD

APPLY 1 - 1/4" STRIPS OF VAPORGUARD ONTO THE END (ONLY ON ONE SIDE OF THE JOINT) OF THE INSULATION TO COVER IT COMPLETELY NO OVERLAPS, BLEND EDGES TOGETHER WITH YOUR FINGERS.

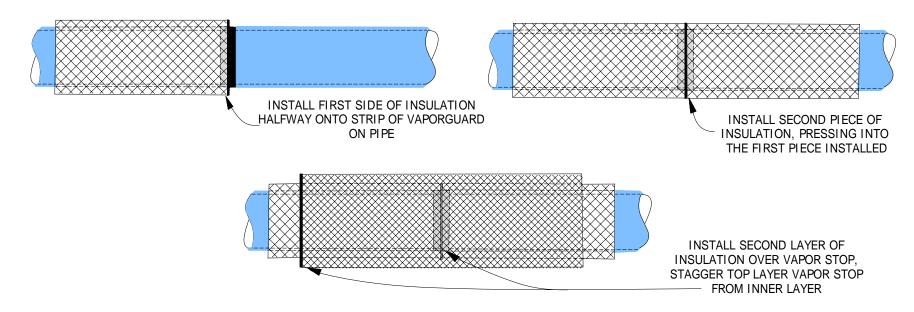



SECTION @ VAPORGUARD THROUGH INSULATION VAPOR STOP DETAIL

POLYGUARD PRODUCTS, INC. 2012

(NOT TO SCALE)

Polyguard Products, Inc.

P.O. Box 755 - Ennis, TX 75119

Phone: 214-515-5000 Fax: 972-875-9425

Web Site - www.polyguardproducts.com xuusinidiunderseali 2007i Mechanicali Vapor Guardi Vapor Gu

The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.