


STEPS:

- 1) MEASURE BATH TRAP OPENING, ADDING 2" ON EVERY SIDE.
- 2) CUT A SECTION OF TRM MICROMESH TO FIT OVER BATH TRAP WITH A 2" OVERLAP ONTO CONCRETE ON EVERY SIDE.
- 3) PLACE WIRE SCREEN ON TOP OF BATH TRAP PENETRATION, MAINTAINING 2" OVERLAP ONTO CONCRETE ON EVERY SIDE.
- 4) USING A MALLET, MAKE A CIRCULAR INDENTATION IN SCREEN OF PENETRATION OUTLINE.
- 5) USING A BOX CUTTER AND WIRE SHEERS, AND USING INDENTION AS A GUIDE, CUT A HOLE IN WIRE SCREEN.
- 6) TEST FIT WIRE SECTION OVER PENETRATION; ADJUST HOLE SIZE, IF NECESSARY.

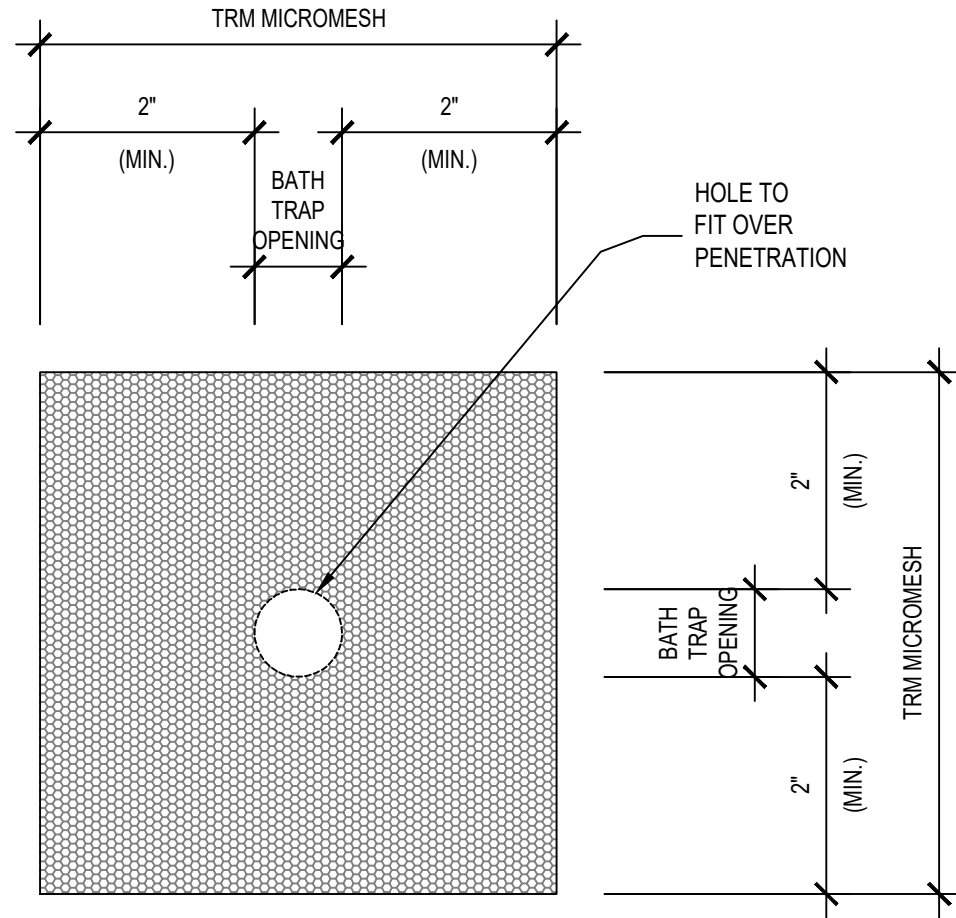

AT5

SECTION @ TRM MICROMESH - FABRICATION SUB-ASSEMBLY FOR BATH TRAP

<small>The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.</small>	NOT TO SCALE
	EFFECTIVE DATE: 01/06/2025
	SUPERCEDES: 05/25/2021