

DETAIL

EXPOSED BOOT

COMPOUND

INSTALL

POLYGUARD

UNDERSLAB

UNDERSLAB

MEMBRANE ONTO


THE PIT SIDEWALL AND TRANSITION A


6" MINIMUM ONTO

THE POLYGUARD

MEMBRANE AROUND

THE TOP OF THE PIT

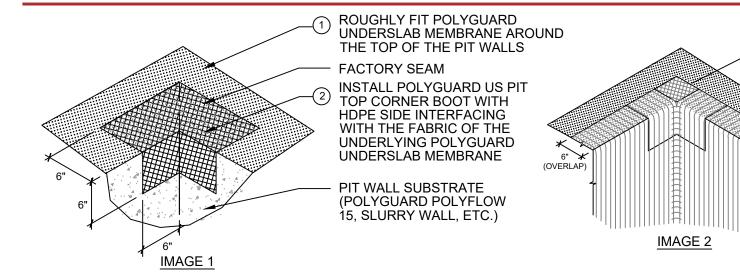

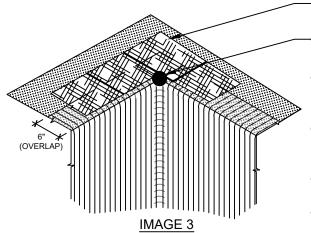

POLYGUARD FABRIC TAPE, EXTEND 6" TO EACH SIDE OF THE UNDERSLAB END LAP

- 3/4" DAUB OF LM-95 TOOLED ONTO SURROUNDING FABRICS
- 4 PREPARE & CLEAN THE EXPOSED BOOT COMPOUND AND POLYGUARD UNDERSLAB FABRIC 6" TO EACH SIDE OF THE END LAP
- (5) APPLY POLYGUARD 650 LT LIQUID ADHESIVE OR POLYGUARD CALIFORNIA SEALANT TO THE CLEANED AREA AT THE RATE OF 50-75 SF / GAL
- © COVER THE SELECTED ADHESIVE OR SEALANT WITH POLYGUARD FABRIC TAPE
- 7 ROLL THE POLYGUARD FABRIC TAPE WITH A HANDHELD HARD SURFACE ROLLER

JS21

OVERVIEW PIT SIDEWALL TRANSITION AT TOP OF WALL

©POLYGUARD PRODUCTS, INC. MATERIAL SEPARATED FOR CLARITY

The information provided is based on data and knowledge considered to b true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us

NOT TO SCALE

On EFFECTIVE DATE:
07/15/2024

SUPERCEDES:

10/01/2022

Polyguard Products, Inc. P.O. Box 755 - Ennis, TX 75120 Phone: 214-515-5000 Web Site - www.polyguard.com