


## Installation Guide: ROT SHIELD Joist Tape


1. Clean and dry the surface, ensuring joists are debris-free.




2. Use guideline text marked at 1¼" from each edge of tape to place Rot Shield on joists, with the text aligned to joist corners

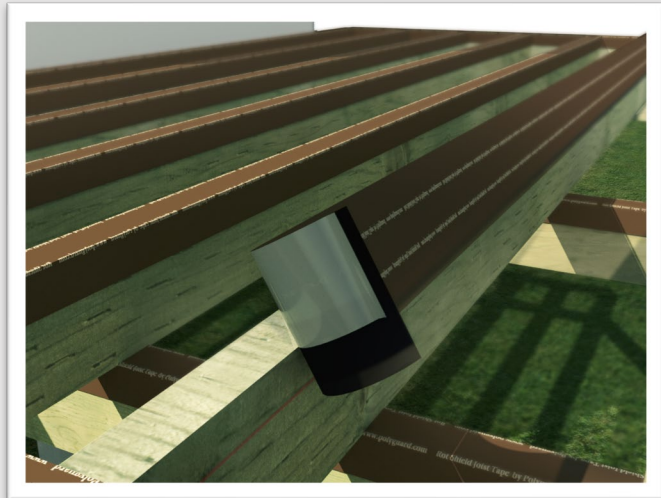


3. Pull split release liner to halfway point and adhere one side, smoothing by hand, then pull the remaining 2" of the liner and hand-smooth tape to joist.

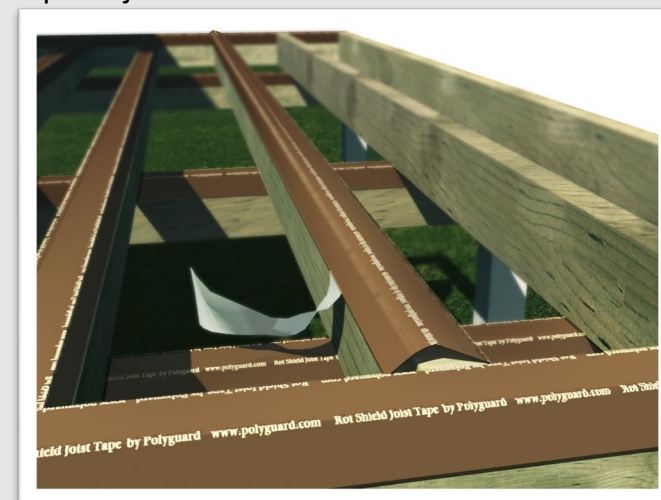

4. Apply to ledger board and deck joists, wrap ends of joists with Rot Shield.

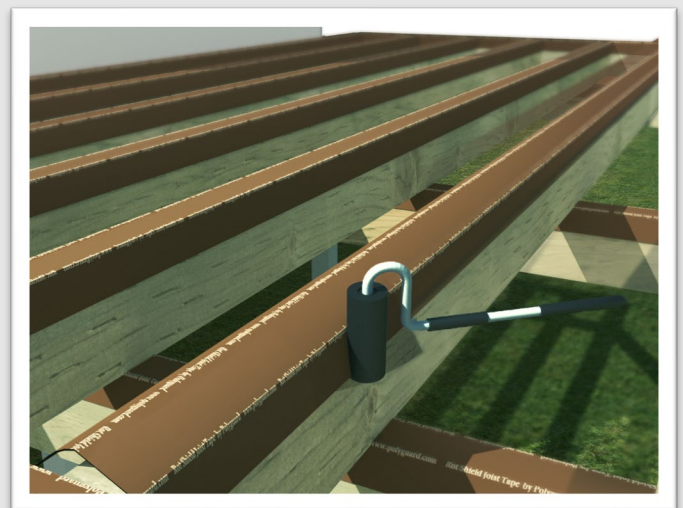

5. Roll over the entire surface using a hand roller, smoothing the tape and boosting the bond of adhesive to joist surface

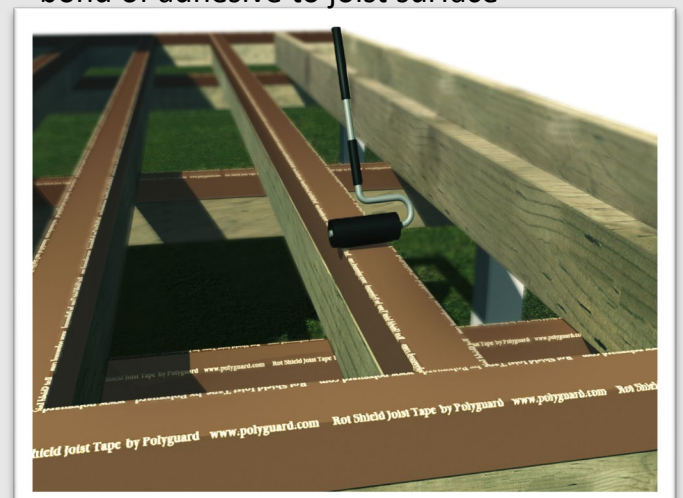

6. Complete job, laying deck boards. Rot Shield Joist Tape is brown so will camouflage well beneath deck boards.

